

SEAT BELT

1. General

The following types of seat belts are provided.

Seat Position	Seat Belt Type	Remarks
Driver	3-point ELR* ¹	Electrical Sensing Type Pretensioner, Force Limiter and Tension Reducer
		Pre-collision Seat Belt (Option)
Front Passenger	3-point ELR* ¹ & ALR* ²	Electrical Sensing Type Pretensioner, Force Limiter and Tension Reducer
		Pre-collision Seat Belt (Option)
Rear Passenger (RH and LH)	3-point ELR* ¹ & ALR* ²	Electrical Sensing Type Pretensioner & Force Limiter
Rear Passenger (Center)	3-point ELR* ¹ & ALR* ²	—

*1: Emergency Locking Retractor

*2: Automatic Locking Retractor


2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.

In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.


Even if the front passenger airbag is not deployed in accordance with the front passenger occupant classification system, the pretensioner and force limiter for the front passenger will be deployed.

► Front Airbag Operation ◀

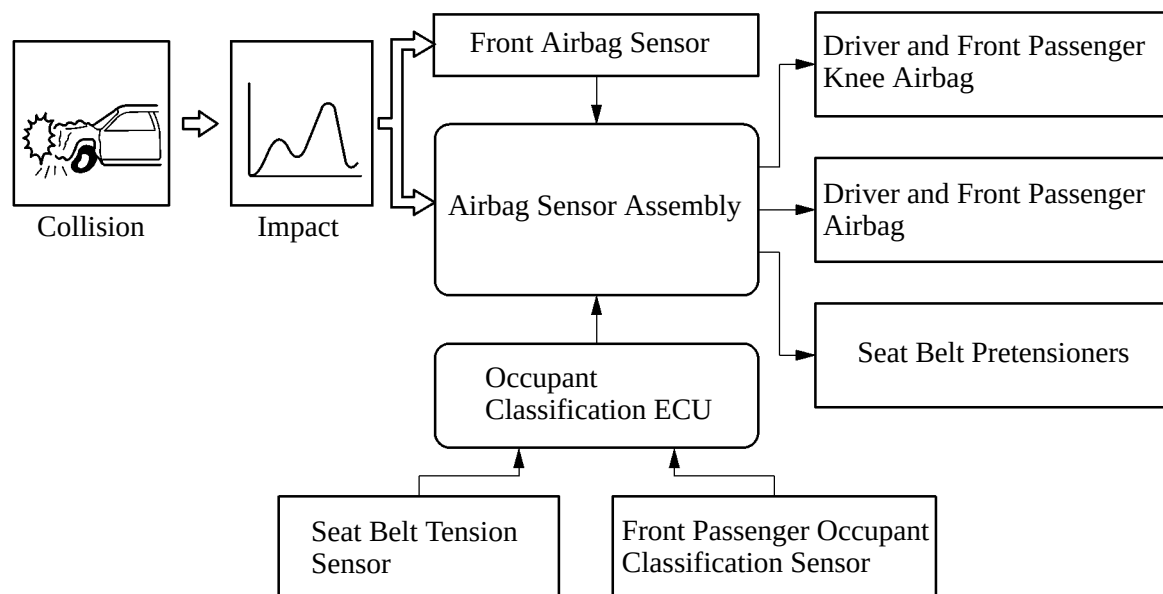

3. Seat Belt Comfort Guide

This belt comfort guides for child or occupant have been added on the both sides of rear seat, With this device, the belt guide can be slid to a position to reduce seatbelt discomfort.

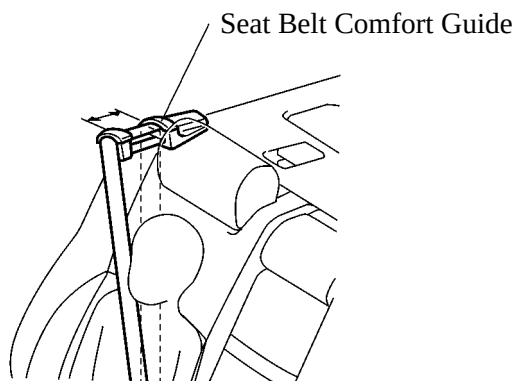

01YBO36Y